

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

The FCC Wants You To Know

Should you experience trouble with this equipment, please contact Uniden customer service at 800-297-1023.

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone. To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

One Year Limited Warranty:

Important: Evidence of original purchase is required for any warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this Product.

STATEMENT OF REMEDY: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit without charge for parts, service or any other costs (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states or provinces do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary by state or province. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual and any instructions given to you by a Uniden customer care specialist, you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden Service Inc., 4700 Amon Carter Blvd., Fort Worth, TX 76155

 
Uniden®

Quick Start Guide

Packet8®

Follow these easy steps and start calling and saving on your phone bill:

1. Install your UIP1868P.
2. Activate your Packet8 account.
3. Make and receive calls with Packet8.

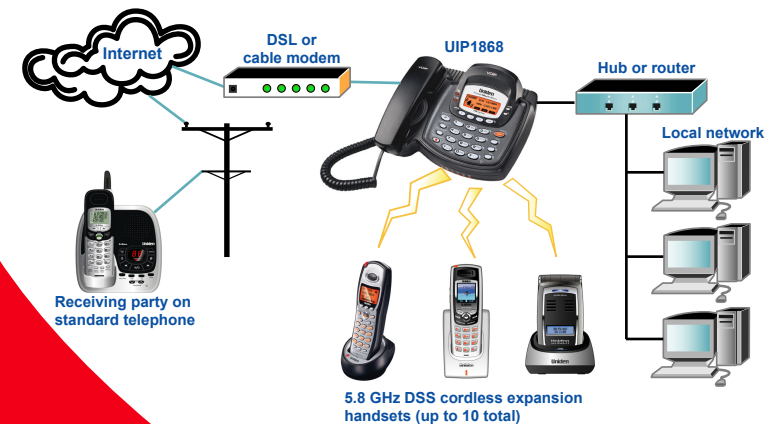

Your new Uniden UIP1868P VoIP phone will only operate if you activate Packet8 service.

All manuals for this product are available at www.uniden.com/voip

Packet8 Broadband Phone Service Reference Card

Calling with Packet8 service— just like using your home or cell telephone

- ▶ To call anywhere in the world, dial: country code + area code + number.
Example: the country code for the U.S. and Canada is "1."
Dial: 1+area code+number.
- ▶ Anyone can call you at your Packet8 phone number.

Using the Features of your Packet8 service

- ▶ **Advanced Call Features:** these features are activated with the [Flash] key on your phone (or going on-hook for half second then going off-hook):
 - **Caller ID:** automatic when presented.
 - **Call Waiting:** a beep is heard when there is an incoming call. Answer the incoming call by pressing the [Flash] key.
 - **Line-alternate/Hold:** press the [Flash] key to put the current line on hold.
 - **3-way Conferencing:** during a call, press [Flash], call third party, then press [Flash] to conference. Press [Flash] again to drop the last person added.
 - ***69 Call Return:** press *69 and stay on the line to automatically ring the last number that called your number.
 - ***70 Call Waiting Disable:** to disable call waiting on a per-call basis, enter *70 before dialing. You can disable call waiting and send new callers to voicemail, or present a busy tone if voicemail is disabled while you are on a phone call.
 - ***77 Anonymous Call Rejection (ACR):** a feature that rejects incoming calls from anonymous callers. It will automatically stop all incoming calls from callers who have their numbers blocked. To de-activate ACR, press *87.
 - ***78 Do Not Disturb:** automatically send your calls directly to your voice messaging box without ringing your phone. You will hear a stutter tone on your phone to indicate the feature is turned on. To de-activate, press *79.
 - **Call Forwarding:** you can forward your phone to ring somewhere else. Go to your account details page after signing in at www.packet8.net or call from your Packet8 phone: 012-0005.

Packet8

3151 Jay Street
Santa Clara, CA U.S.A. 95054
Tel: 408.727.1885 • Fax: 408.980.0432
www.packet8.net

 
Packet8, the Packet8 logo, and the 8x8, Inc. logo are registered trademarks of 8x8, Inc. 8x8, Inc. is a Nasdaq listed company, symbol EIGHT.
© 2005. 8x8, Inc. All rights reserved.

 8x8, Inc.


VoiceMail Reference Card

Using VoiceMail on your Packet8 service

- ▶ To set up one-touch VoiceMail access on your UIP1868P:
 - At the main base, press the **MENU** soft key.
 - Choose **Base Setup**, then **Edit Voice Mail**.
 - Enter the Packet8 VoiceMail access number: 012-0555.
 - Press the **OK** soft key. You will hear a confirmation tone.
- ▶ To check your Packet8 VoiceMail:
 - From your UIP1868P: Press the envelope key.
 - From another phone on your Packet8 service: 012-0555
 - From any phone, toll-free: 1.888.898.7887
 - From any phone outside the U.S.: 1.650.353.4400
- ▶ When prompted, enter your Packet8 phone number (1+area code+number) and then your password
- ▶ If you have a message waiting, you can press:
- ▶ If you do not have a message waiting, you can press:

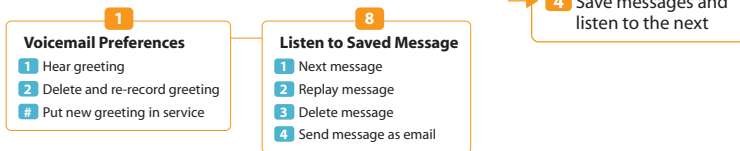

 - ▶ There are two ways to change your VoiceMail settings, VoiceMail password, number of rings, and call settings:
 - Access your account details page after signing in at www.packet8.net
 - Call from your UIP1868P: 012-0005
- ▶ When prompted, enter your Packet8 phone number, then your password
- ▶ Telephone keypad map for changing your Packet8 account settings:

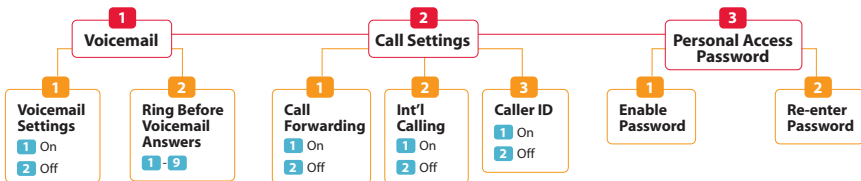

Packet8 Contact Information:

- Automated Activation Service: 012-0001
- Automated IP Address/Phone Number Service: 012-0003
- Packet8 Voicemail: 012-0555

Support:

- www.packet8.net/support
- Email: technicalsupport@packet8.net
- Customer Service, toll-free: 1.888.898.8733
- Customer Service, outside U.S.: 1.408.687.4120

Packet8 services do not include traditional 911 emergency dialing. Packet8 offers Enhanced 911 service (an FCC standard developed for emergency calling from wireless phones) at an additional monthly fee. A subscription to Packet8's Enhanced 911 service is required for emergency calling. Packet8's Enhanced 911 optional service is not available in all areas.

Quick Start Guide

This Quick Start Guide assumes you have the following items available:

- ▶ A broadband modem and an active broadband Internet service.
- ▶ A computer with an Ethernet port.
- ▶ A CAT-5 Ethernet cable (RJ-45).
- ▶ A DHCP client running your computer (e.g., your ISP automatically assigns an IP address to your computer). For installations with a fixed IP address or special configurations, please see the Administrator's Guide at www.uniden.com/voip.

Before You Start:

Consult your VoIP service provider for configuration information.

 
1 Check the package contents

- ▶ Make sure the package contains the following items:
 - UIP1868 main base
 - Cordless handset and charger
 - 2 AC power adapters
 - Belt clip
 - Rechargeable battery pack
 - One coiled handset cord
 - One CAT-5 Ethernet cable (RJ-45)
 - Printed materials

2 Connect the UIP1868

- ▶ Use the coil cord to connect the corded handset to the main base.
- ▶ Connect the UIP1868 to your network as follows:

- 1 Use the included Ethernet cable to connect your broadband modem to the RJ-45 port labeled WAN.
- 2 Use another Ethernet cable to connect your PC or router to the RJ-45 port labeled LAN.
- 3 Use the AC adapter to connect the port labeled POWER to a 120 Vac continuous power outlet.

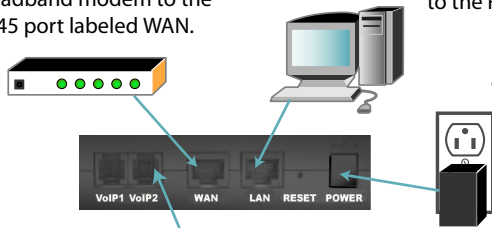

If you subscribe to a second line, use a telephone cord to connect a phone or fax to the RJ-11 port labeled VoIP2.

CAUTION:

Do not connect the UIP1868 to a regular telephone wall jack.

All the LEDs will flash, and the PWR LED remains on. If your service provider recognized and registered your UIP1868, the CA (call agent) LED will also remain on.

3 Configure for your service provider

 
- ▶ Open an Internet Explorer web browser window.
- ▶ In the address bar, enter the IP address *192.168.15.1*.
- ▶ At the login prompt, enter the user ID *admin* and the password *UnidEn79!*.

Install Your Cordless Handset and Charger


1 Install the Handset Battery Pack

NOTE: Use **ONLY** the Uniden rechargeable battery pack supplied with your new phone!


- 1 Remove the cover.

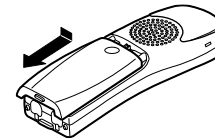

 - 2 Connect the battery pack with the correct polarity.

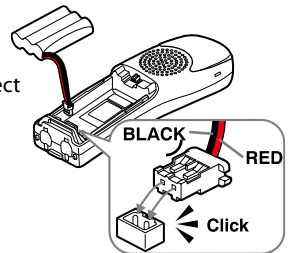


- 3 Replace the cover.

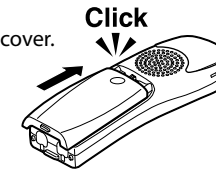 

2 Charge the Cordless Handset

 - ▶ Connect the AC adapter cord to the DC IN 9V jack on charger, then plug into a 120V AC power outlet.
- ▶ Place the handset in the charger. Make sure that charge LED illuminates. Charge the handset 15-20 hours.

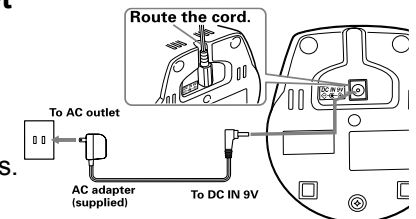

NOTE: Fully charge the battery pack before using the handset.

3 Make & Receive Calls with the Cordless Handset

- ▶ To make a call:
 - Press **(talk/flash)**
 - Listen for dial tone.
 - Dial the number.
- ▶ To receive a call:
 - Pick up the handset and press **(talk/flash)**
- ▶ To end a call:
 - Press **(end)** or return the handset to the charger.

NOTE: 911 service may require separate registration or activation from your service provider; your service provider may also charge a separate subscription fee for 911 service. Read all instructions from your service provider carefully and be sure you understand the procedures and costs involved in obtaining 911 service. Voice quality and reliability may vary depending on your VoIP service provider's network and your broadband ISP connectivity.